


Note:
Assemble Cable Following Schematic.

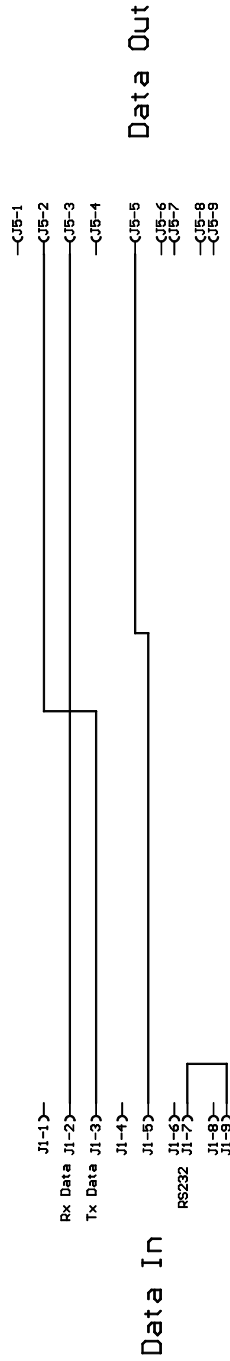

9 pin Fmale Dsub, solder cup
Install Connector back shell

9 pin Fmale Dsub, solder cup
Use black silicone tape in place
of back shell on this end

- 3 Conductor cable, 6 feet
- 9 Pin Dsub Connector, Female, Solder Cup.
- 9 Pin Dsub Back Shell

Mark with "S16"

Used on: SteppIR to SteppIR

FLUIDMOTION

TITLE: 9PinD Female null (cross) Cable, one b

Document Number: 21-6016-01 REU:

Date: 7/02/2004 02:18:16p Sheet: 1/1